



- PoE option
- IEEE 1588 PTP
- Trigger over Ethernet
- Auto iris
- Angled head option
- Board level option

### **Simplify your setup of multi-camera applications**

## Modular machine vision camera with GigE Vision interface

Manta G-223 with CMOSIS/ams CMV2000 runs 53 frames per second at 2.2 MP resolution.

Manta is Allied Vision's most versatile GigE Vision camera series. It provides the largest choice of image sensors and its advanced feature set simplifies the setup of multi-camera applications. With its modular hardware concept, Manta offers nearly endless configuration possibilities to adapt the camera to your application.

Easy software integration with Allied Vision's **Vimba X** and compatibility to the most popular **third party image-processing libraries**.

See the **Modular Concept** for lens mount, housing variants, optical filters, case design, and other modular options. See the **Customization and OEM Solutions** webpage for additional options.

## Specifications

|                                    |                                                    |
|------------------------------------|----------------------------------------------------|
| Interface                          | IEEE 802.3 1000BASE-T, IEEE 802.3af (PoE) optional |
| Resolution                         | 2048 (H) × 1088 (V)                                |
| Sensor                             | CMOSIS/ams CMV2000                                 |
| Sensor type                        | CMOS                                               |
| Shutter mode                       | GS (Global shutter)                                |
| Sensor size                        | Type 2/3                                           |
| Pixel size                         | 5.5 µm × 5.5 µm                                    |
| Lens mounts (available)            | C-Mount, CS-Mount                                  |
| Max. frame rate at full resolution | 53 fps                                             |
| ADC                                | 12 Bit                                             |
| Image buffer (RAM)                 | 128 MByte                                          |

### Imaging performance

Imaging performance data is based on the evaluation methods in the EMVA 1288 Release 3.1 standard for characterization of image sensors and cameras. Measurements are typical values for monochrome models measured at full resolution without optical filter. Contact Sales or AE for more information.

|                                |                     |
|--------------------------------|---------------------|
| Quantum efficiency at 529 nm   | 72 %                |
| Temporal dark noise            | 13.3 e <sup>-</sup> |
| Saturation capacity            | 9400 e <sup>-</sup> |
| Dynamic range                  | 56.7 dB             |
| Absolute sensitivity threshold | 13.8 e <sup>-</sup> |

### Output

|                                 |                                                  |
|---------------------------------|--------------------------------------------------|
| Bit depth                       | 8-bit or 12-bit                                  |
| Monochrome pixel formats        | Mono8, Mono12Packed, Mono12                      |
| YUV color pixel formats         | YUV411Packed, YUV422Packed, YUV444Packed         |
| RGB color pixel formats         | RGB8Packed, BGR8Packed, RGBA8Packed, BGRA8Packed |
| Raw color pixel formats (Bayer) | BayerGB8, BayerGB12, BayerGB12Packed             |

### General purpose inputs/outputs (GPIOs)

Opto-isolated I/Os 2 inputs, 2 outputs

RS232 1

### Operating conditions/dimensions

Operating temperature +5 °C to +45 °C ambient (without condensation)


Power requirements (DC) 8 to 30 VDC AUX or IEEE 802.3af PoE

Power consumption External power: 2.7 W at 12 VDC | Power over Ethernet: 3.1 W

Mass 190 g; 200 g (PoE)

Body dimensions (L × W × H in mm) 86.4 × 44 × 29 (including connectors)

### Quantum efficiency

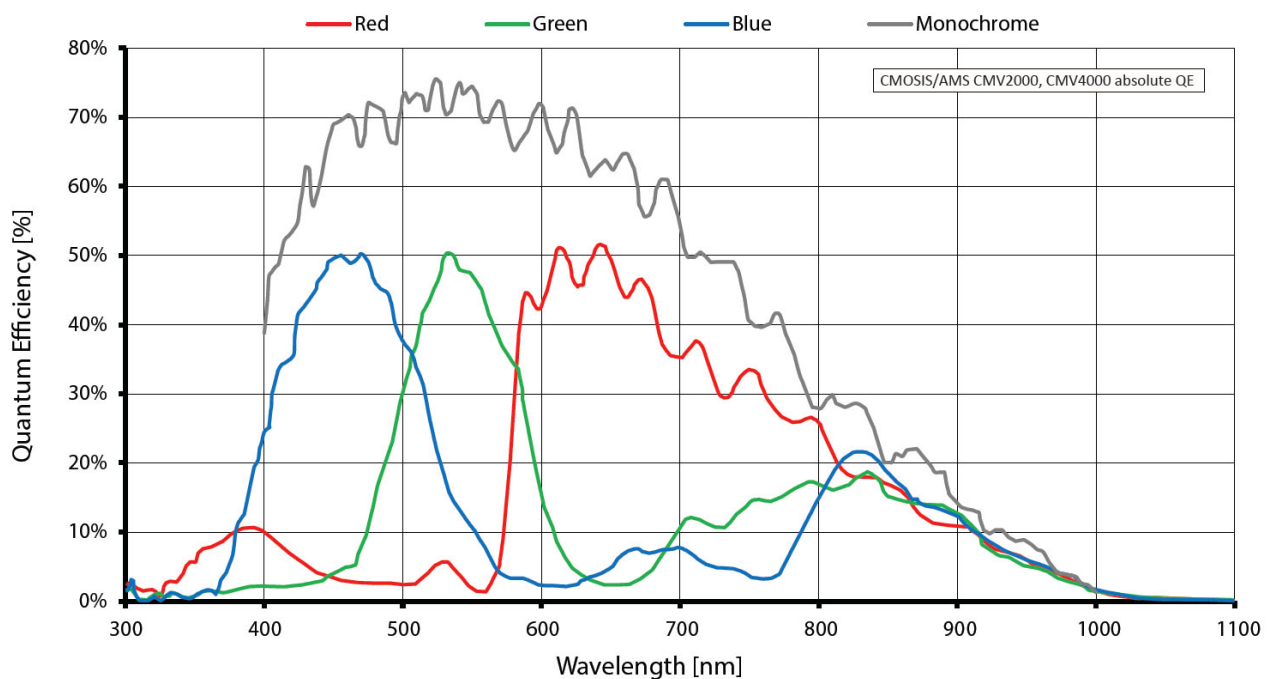

## Features

### Image control: Auto

- Auto exposure
- Auto gain
- Auto white balance (color models)


### Image control: Other

- Black level
- Color transformation (incl. hue, saturation; color models)
- Decimation
- DPC (defect pixel correction)
- Gamma
- LUT (look-up table)
- Reverse X/Y
- ROI (region of interest)

### Camera control

- Acquisition frame rate
- Action commands, incl. ToE (trigger over Ethernet)
- Auto iris
- Bandwidth control
- Event channel
- Firmware update in the field
- I/O and trigger control
- Image chunk data
- PTP (IEEE 1588 Precision Time Protocol)
- Stream hold
- Temperature monitoring
- User sets

# Technical drawing

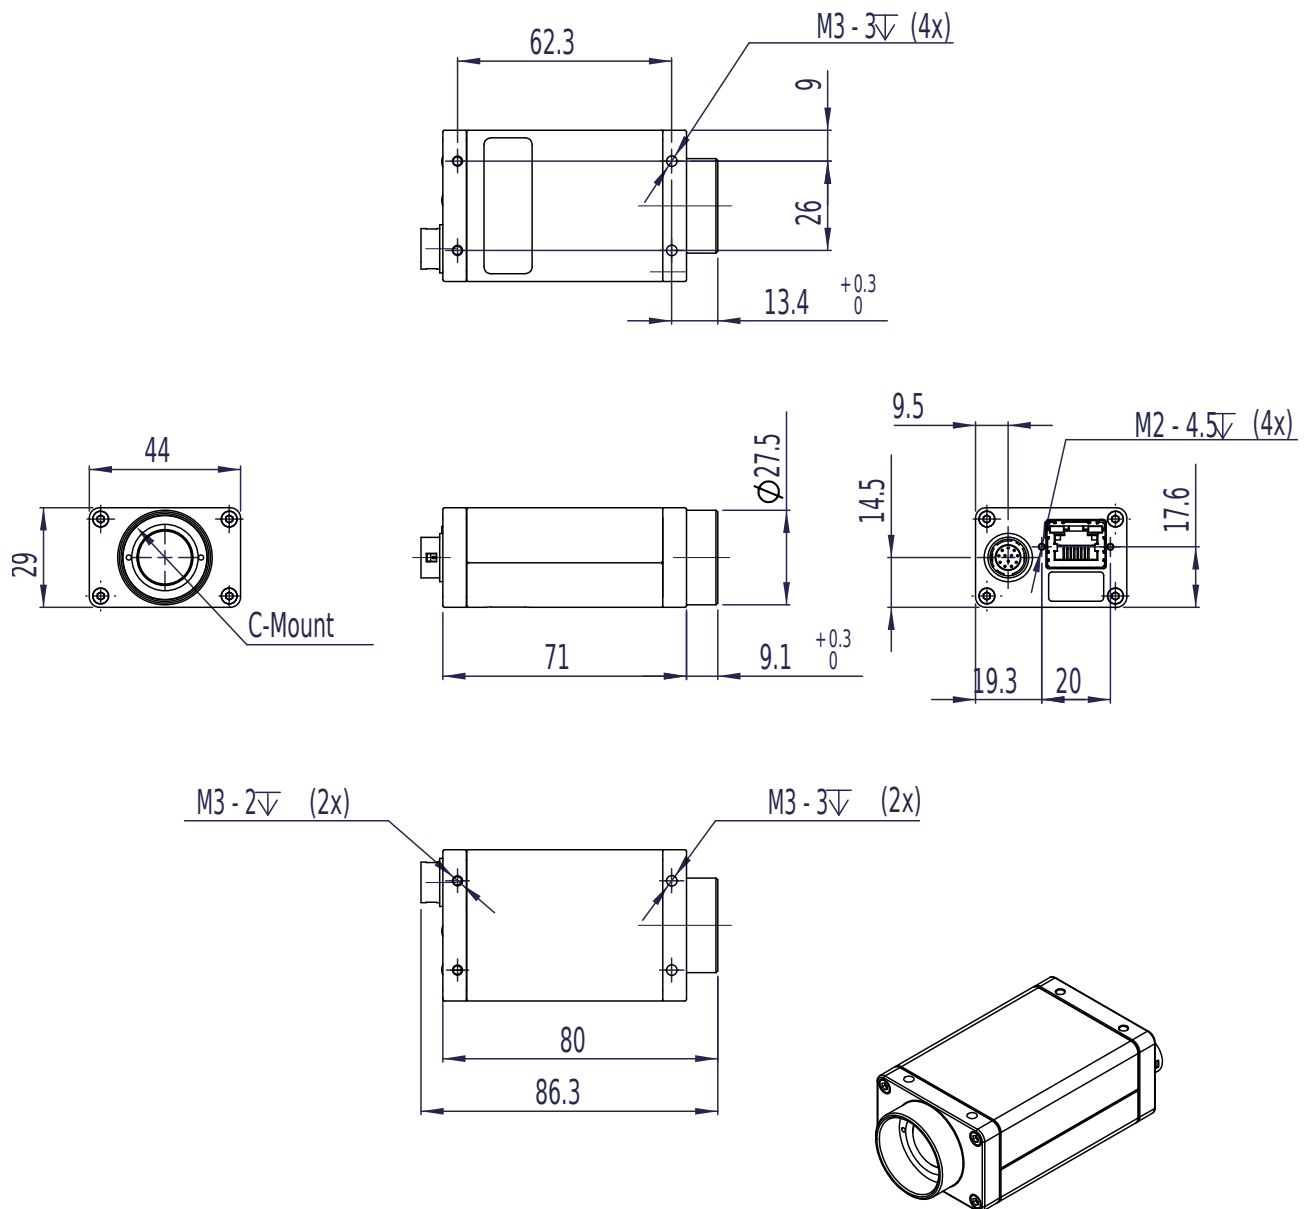

## Applications

Manta G-223 is ideal for a wide range of applications including:

- Full HD solutions
- Machine vision
- Industrial inspection
- Security and surveillance
- Industrial image processing
- Intelligent traffic solutions (ITS)